


## Dismantling the original side covers

1. Loosen the screws (1) and pull the original side covers from the fastening pins.
2. remove the rubber stoppers (3) from the original covers (4/5).

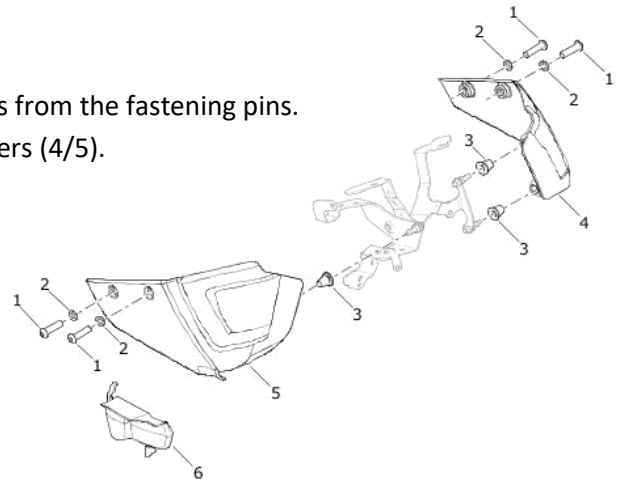

## Fitting the "Racing" side covers

1. insert the rubber stoppers (3) into the new side covers (Abb.1).
2. ***Left side, only for Softail FXDR:*** Loosen the screw (Abb.2), place the retaining bracket under the existing attachment and fix both in place.
3. Fix the covers with the screws provided (Abb.3)

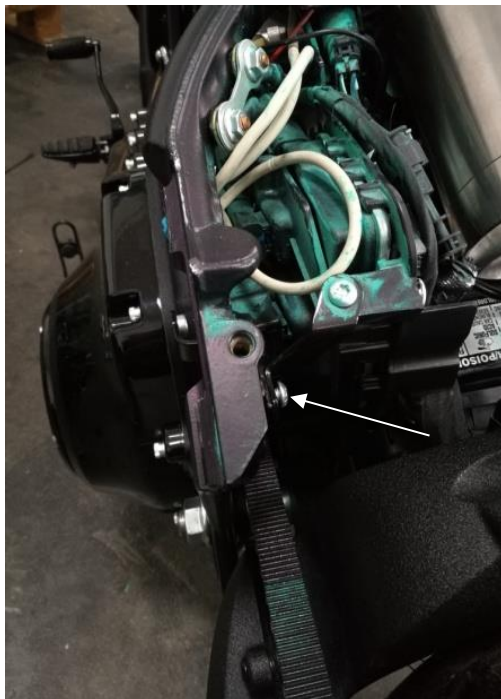


Abb. 2



Abb.1, Side cover left



Abb. 3

We recommend using a medium-strength screw lock (e.g. LOCTITE 243, blue) for all screws.