

## Dismantle original front fender

1. loosen the screws (4) and the retaining bracket (Abb.1).
2. remove the bracket and fender

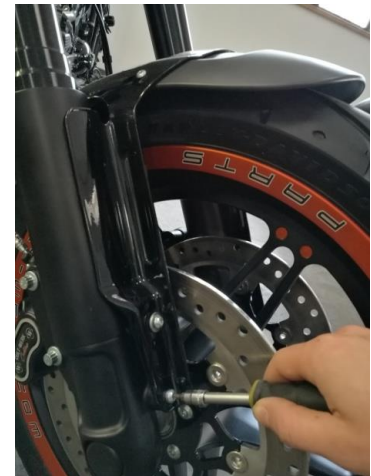


Abb.1

## Fitting the "Custom" front fender

1. Screw the supplied mounting plates onto the "Custom" front fender. (Abb.2) Tighten only hand-tight so that the fender can still be set up afterwards.
2. fix the fender with the mounting plates to the original fixing points.
3. now adjust the fender and tighten the screws.

When mounting, ensure that the unit is placed centrally and that there is sufficient clearance to moving parts.

### Tightening torque:

Fender on mounting plates: 4-6Nm

Plates on fork: 15-20Nm

We recommend using a medium-strength screw lock (e.g. LOCTITE 243, blue) for all screws.



Abb. 2



Abb.3 – Mounted front fender „Custom“