

1. Detach the original speedometer unit from the handlebar clamp and remove the speedometer unit.
2. Disassemble the original dash cover and remove the airbox cover.
3. the cable for the speedometer unit must be re-routed under the airbox cover. (Abb.1)

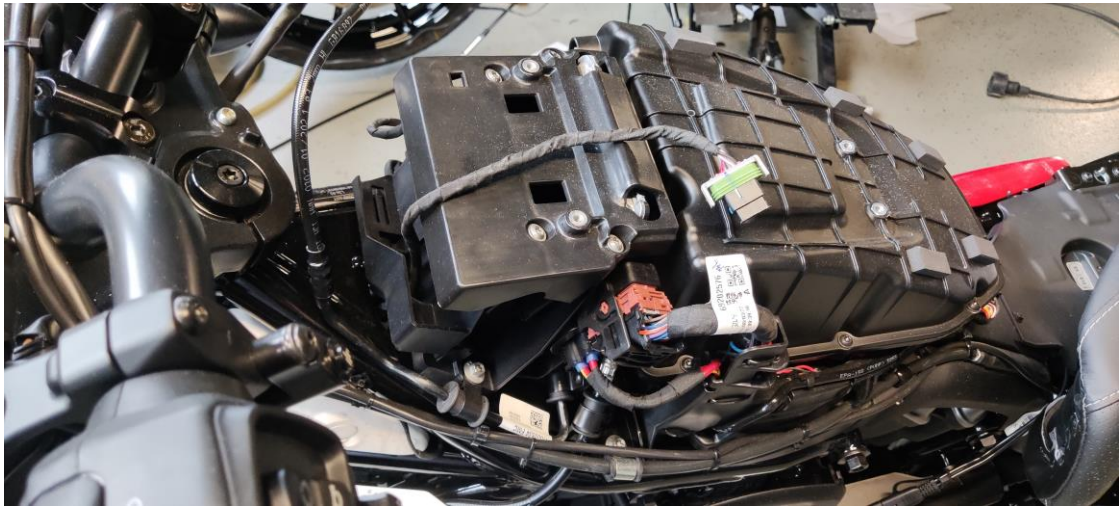


Abb.1

4. Replace the airbox cover. When doing so, screw the metal bracket to the upper attachment points as well. (Abb.2)



Abb.2

5. The speedometer unit is inserted into the Cult-Werk DashCover from above - fixed underneath with the original gasket and then the supplied speedometer cover. Align the speedometer before tightening the screws firmly (Abb.3)



Abb.3

6. Now screw the Dash Cover tight - at the front on the supplied metal bracket and at the back on the original bracket. The screws for this are supplied.